BDU-X10S Firmware Update

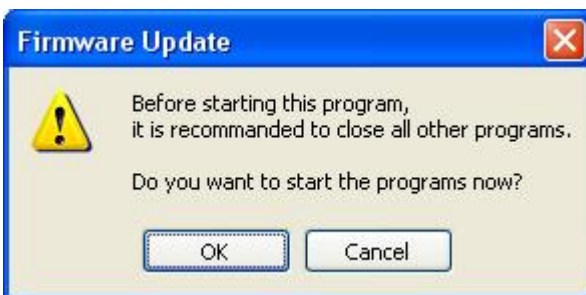Download the BDU-X10S firmware updater to your hard disk, unzip the file, and then perform the procedure below.
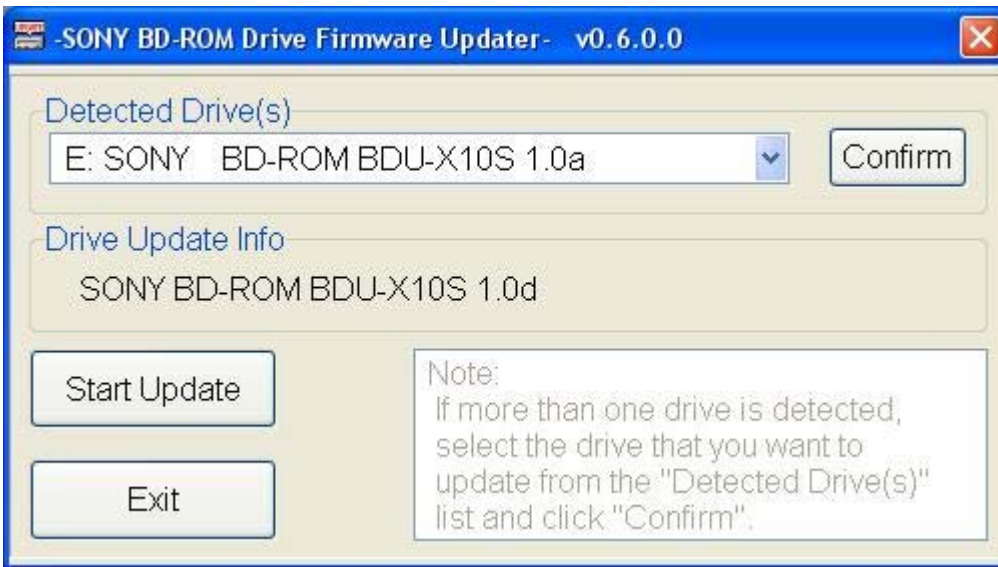
Important Note:

- When using Windows Vista or Windows XP, **log on to Windows as the computer administrator or as a user with administrator access privileges.**

1 **Connect the BDU-X10S to your computer. Confirm that the drive is detected correctly by your computer.**

2 **If a disc is loaded in the drive, remove it.**

3 **Double-click the executable file "BDUX10S_10d.exe"**

4 **Close all other programs and Click [OK] to continue.**

5

Please choose the correct drive and select [Start Update] to continue.

-SONY BD-ROM Drive Firmware Updater-   v0.6.0.0

Detected Drive(s)

E: SONY   BD-ROM BDU-X10S 1.0a   ▼   Confirm

Drive Update Info

SONY BD-ROM BDU-X10S 1.0d

Start Update

Exit

Note:
If more than one drive is detected,
select the drive that you want to
update from the "Detected Drive(s)"
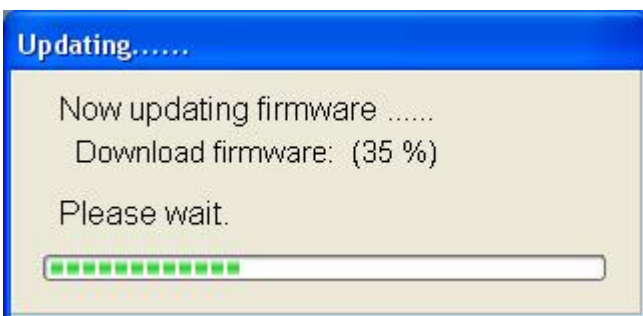list and click "Confirm".

6   **Please confirm if you want to update by selecting "OK." Please note that the computer will be restarted after the firmware update has been finished.**

Confirm Update

⚠ Your computer will be restarted
after the update.

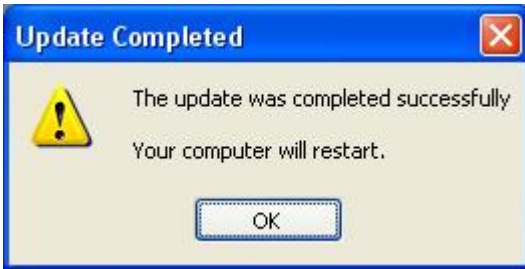Continue ?

OK   Cancel

Note:
Do not turn off the power of the drive or your computer during the firmware update. Further, do not handle the drive or interface cable, or touch your keyboard as it may cause the update to fail or make the drive unusable.

7   **The drive indicator becomes blue and the update begins.**

Updating......

Now updating firmware ......
  Download firmware: (35 %)

Please wait.

The update is now completed, click [OK] to restart your computer.

8 **Update Completed**

The update was completed successfully

Your computer will restart.

OK